

The faceplate and jog wheel on the ZAC-60 Audio Controller/Amplifier are removable so that one can install a faceplate and jogwheel kit available in different colors and finishes.

You will need the following tools to complete this task:


- A small, flat bladed screwdriver
- A 7/16" nut driver
- A ZAC-60 FPxx (Faceplate/jog wheel kit)
- These instructions

ZAC-60 Jog Wheel Assembly

1. Center Button
2. Jog Wheel Nut and Washer
3. Jog Wheel
4. Collet
5. ZAC-60 Shaft

Remove the Installed Faceplate/Jog Wheel

1. Remove the center button. Using a small, flat blade screwdriver, gently pry off the center button by applying a small amount of pressure to one of the locking tabs. Use caution not to damage the plastic on the wheel or the center button.
2. Remove the jog wheel nut and washer. Using a 7/16" nut driver, remove the nut and washer from the shaft. Retain these parts for re-installation.
3. Remove the jog wheel. Slide the wheel off the shaft. If the collet is removed with the wheel, keep these parts available for re-installation. If you do not see the collet, check the center of the wheel - sometimes the collet remains in the center of the wheel.
4. Remove the ZAC-60 faceplate. Carefully remove the faceplate by lifting out and up from the center of the lower edge of the faceplate.

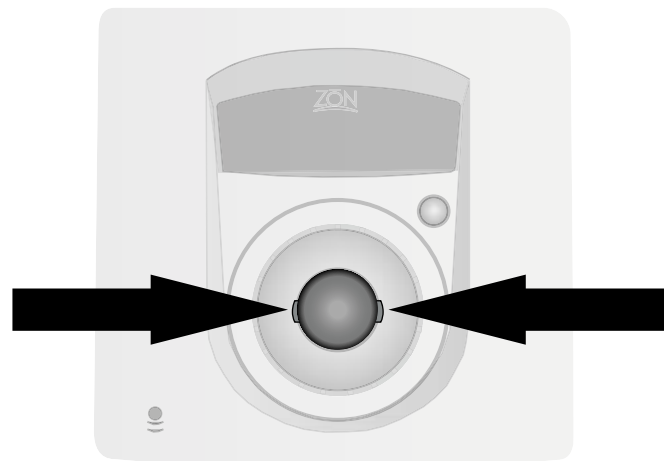

Center button locking pins

Use extreme care while handling your ZAC-60 without it's faceplate installed. You should also note that it is possible to damage the LCD screen by applying pressure to the screen or by dropping the unit.

Application Guide



Installing a ZAC-60 Faceplate and Matching Jog Wheel Kit

Installing the New Faceplate/Jog Wheel Kit

1. Install the ZAC-60 faceplate. Place the top edge of the faceplate on the top edge of the controller and snap in place by applying pressure to the bottom-center of the faceplate.
2. Install the collet (if removed). The top of the collet should be flush with the top of the shaft.
3. Install the wheel. Slide the wheel on to the shaft. The wheel should not be allowed to rest on the opaque plastic of the volume dial. Turn the wheel to check that it clears the plastic underneath it. Some slight upward adjustment of the collet may be necessary.
4. Install the jog wheel washer and nut. Slide the washer, then nut on to the collet. Hold the wheel in place while you tighten the 7/16" nut. **DO NOT OVER TIGHTEN.** When properly installed, the wheel should not rub against the plastic underneath, it should turn freely, and have enough play so that the wheel can be pushed in to trip the switch on the shaft.
5. Install the center button. Align the center button so that its locking pins line up with the receiver slots on the jog wheel. Apply gentle pressure to snap the button into place.



*ZAC-60 Jog Wheel Assembly Illustration
(Shown without the center button installed)*

Notice:

Improper removal/installation of the ZAC-60 faceplate and matching jog wheel kit can cause damage to your ZAC-60 Audio Controller/Amplifier. Such damage may not be covered under Oxmoor's limited two year warranty. Refer to the ZON Installation and User's guide for warranty and factory service information.

OXMOOR®

Oxmoor Corporation, LLC
309A Cahaba Valley Parkway North
Indian Springs, AL 35124
800-262-6898 • 205-982-8200
www.zonaudio.com