 
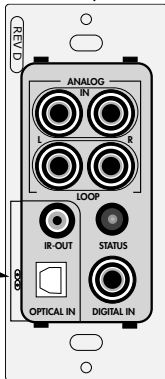 


IMPORTANT INFORMATION PLEASE READ

The TosLink Optical Input on Revision D modules must be enabled before use.

This unit ships with a fully functional analog input, analog loop output, coaxial digital input and IR bug output. If you wish to connect a TosLink optical input, you must enable the TosLink input as described below. If you do not plan to connect a TosLink optical input, no action is necessary.

To enable the TosLink input connection, remove the jumper from its default position and re-insert the jumper so that it is covering both TosLink enable pins. When both TosLink enable pins are covered by the jumper, the TosLink enable connection is available for use.

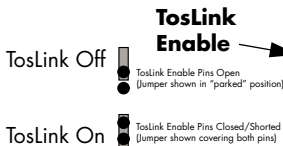

**Additional technical information is available on the ZON
website: www.zonaudio.com**